

INSTALL WIRELESS DOOR & WINDOW CONTACTS

INSTRUCTIONS - INSTALLING A WIRELESS CONTACT - HONEYWELL 5800MINI

- 1- Carefully open the Honeywell 5800 MINI wireless contact package and lay out all of the included parts.
- 2- Open the cover of the wireless contact by gently prying up on the small indent tab on one end and gently pull the cover up.
- 3- Insert the supplied lithium CR2032 battery carefully observing the polarity, keeping the (+) oriented up.
- 4- The contact assembly consists of two (2) main components - the contact itself which contains a small magnetic reed style switch located near the battery, and a magnet which activates the switch when in close proximity. When the switch is activated it is CLOSED The contact itself will be mounted to either the door or window, and the supplied magnet will be installed on the door frame/trim or window trim/upper window lip.
- 5- Locate a suitable area on the door or window to be protected, keeping in mind a few important items:
- 6- On the Honeywell 5800 MINI there are a few additional features that can assist in the installation. The small LED's in the contact will signal RED- low battery, GREEN- transmitting success, BLUE- magnet detection for helping align the contact properly on doors/ windows. When the magnet is aligned properly during initial setup, the contact will illuminate a blue arrow towards the side the magnet needs to be located.



- a) Door- The contact should be mounted on the upper corner of the door, same side as the door knob/ latch, vertically at the edge so the magnet will be within 1/2" of the contact when mounted on the door trim.
- b) Window - On double hung windows the contact can be mounted on the top ledge of the bottom window, away from the locks or tilting releases, and the magnet can be mounted

Continued...