

INSTALL WIRELESS DOOR & WINDOW CONTACTS

INSTRUCTIONS - INSTALLING A WIRELESS CONTACT - HONEYWELL 5820 L

1- Carefully open the Honeywell 5820L wireless contact package and lay out all of the included parts.

2- Open the cover of the wireless contact by gently prying up on the small indent tab on one end and gently pull the cover up.

3- Insert the supplied lithium AAA battery carefully observing the polarity, keeping the (+) oriented towards the white + marking.

4- The contact assembly consists of two (2) main components - the contact itself which contains a small magnetic reed style switch, and a magnet which activates the switch when in close proximity. When

the switch is activated it is CLOSED The contact itself will be mounted to either the door or window, and the supplied magnet will be installed on the door frame/trim or window trim/upper window lip.

5- Locate a suitable area on the door or window to be protected, keeping in mind a few important items:

6- On the Honeywell 5820L there are a few things to keep in mind during installation- since there is no separate base the RFID is located on the bottom of the contact itself- Remove this prior to installing the supplied double sided tape. Be sure to keep the cover release tab accessible when mounted to ensure you can service the contact in the future. A small bead of GE silicone along one edge of the mounting base will ensure a more reliable installation over time.

a) Door- The contact should be mounted on the upper corner of the door, same side as the door knob/ latch, vertically at the edge so the magnet will be within 1/2" of the contact when mounted on the door trim.

b) Window - On double hung windows the contact can be mounted on the top ledge of the bottom window, away from the locks or tilting releases, and the magnet can be mounted



Continued...