

INSTALLING WIRELESS KEYFOBS

INSTRUCTIONS - INSTALLING A WIRELESS 4 BUTTON KEYFOB

- 1- Unpack the Honeywell wireless keyfob and keep all instruction manuals for later use.
- 2- The Honeywell 4 button wireless keyfob comes defaulted in a different security mode which will prevent you from programming to the Lynx Touch 5210. To switch modes on the remote, press unlock, panic and arm stay simultaneously for 5 seconds (Top right, bottom right and bottom left buttons looking at the remote with the keyring facing you) after successfully switching modes the LED at the top of the remote will blink green.
- 3- Remove the RFID sticker from the rear of the keyfob and place below for use later.



Keyfob 1



Keyfob 2



Keyfob 3



- 4- Do NOT confuse the RFID with any of the other contacts unique numbers. Keep the keyfobs in a safe place until the programming step covered later.

Thank you for your purchase from Fox Guard Security. If you need further instruction for this specific product feel free to visit our support section of Foxguardsecurity.com or our video library on our growing You Tube channel.