



## INSTALLING ASSET PROTECTION SENSORS

### INSTRUCTIONS - INSTALLING A HONEYWELL ASSET PROTECTION SENSOR

- 1- Carefully open the Honeywell asset protection sensor and save all manuals and parts for future use.
- 2- The asset protection can be used for several different purposes, the most common are: expensive flatscreen TV's, artwork, safes and cash boxes. Note: there are 3 different modes to program the sensor - high security (loop 1), standard (loop 2) and tilt mode (loop 3) in most cases loop 2 should be used standard security mode. For loop 3 tilt mode (jewelry box) the sensor must be mounted horizontally.
- 3- Dual Tamper Protection The 5870API has both front case cover and rear tamper protection. If attempt is made to remove the front case cover, the internal tamper switch will send a tamper condition. The same tamper switch will protect against removal from the asset (rear tamper protection).
- 4- Full Supervision - The 5870API is fully supervised to monitor for low battery, tamper (front case cover and removal from asset) and trouble conditions.
- 5- Quick and Easy Installation - Simply pull the battery tab to enroll the transmitter, peel the adhesive backing tape and secure the 5870API to the asset in the desired location. Two attractive housings are available to blend in with the asset. Be certain the surface is clean of dirt and oils by cleaning with an alcohol wipe first.

Asset 1 \_\_\_\_\_



Asset 2 \_\_\_\_\_



Thank you for your purchase from Fox Guard Security. If you need further instruction for this specific product feel free to visit our support section of [Foxguardsecurity.com](http://Foxguardsecurity.com) or our video library on our growing You Tube channel.