

## INSTALLING Z-WAVE MODULES TO PANEL

### INSTRUCTIONS - SETTING UP Z-WAVE COMMUNICATION

- 1- Open the Lynx Touch front panel by referencing the instructions in 2-2, power down the unit by unplugging the battery backup and removing the Honeywell transformer from the electrical outlet
- 2- Unpack the Z-WAVE module and carefully remove the electrostatic protective bag, saving the box and all manuals for future reference.
- 3- With the panel powered down, carefully plug the Z-WAVE module into the location under the cellular communicator\* on the left side of the control board. The green PC board is the male connector itself and the Z-WAVE module contains the female connector.
- 4- Reconnect the battery backup and the transformer and allow the system to power up.
- 5- Green "Ready To Arm" will display when the unit is initialized. Press "Security" - Press "More" Press "Tools" enter the default code of 4-1-1-2 if the system is a new install. If this is your existing system enter your 4 digit installer code instead.
- 6- Press "Program", Press "down arrow", Press "Z-Wave", confirm that Z-Wave is "Enabled - Installed Telephone Side". If your Z-Wave is not enabled reference the troubleshooting in section 11-1.
- 7- Press "Save", Press the "Back arrow". Press "YES" to allow installer to re-enter programming.
- 8- Press the green "Back arrow" to return to the main screen.
- 9- Refer to the programming manual for a complete guide to adding and removing devices, setting up schedules and how to add Z-Wave rules.



*\*If installed*

Thank you for your purchase from Fox Guard Security. If you need further instruction for this specific product feel free to visit our support section of [Foxguardsecurity.com](http://Foxguardsecurity.com) or our video library on our growing You Tube channel.