

INSTALLING SMOKE DETECTORS

INSTRUCTIONS - INSTALLING A WIRELESS SMOKE DETECTOR

- 1- Unpack the Honeywell wireless smoke detector and keep all instruction manuals for later use.
- 2- ALWAYS install all smoke detectors per local, national and fire codes. Fox Guard shall not be held liable for product installed incorrectly, or installations that do not meet current code requirements.
- 3- Place smoke detectors in sleeping areas and on each level of the home. DO NOT install heat detectors near stoves or fireplaces. For maximum protection install heat detectors inside garages, near home electrical panels, and attic areas. See installation manual for detailed instructions.
- 4- Remove the RFID sticker from the included mounting base and place in the correct box and keep this sheet for programming later. DO NOT mix up these numbers.
- 5- Mark the mounting holes of the smoke detector base in the ceiling of the desired room to protect and be sure the detector is placed properly according to code and manufacturer guidelines. Pre drill the drywall anchors with a 7/32" drill bit only for the depth of the drywall. Insert the plastic drywall anchors fully and use #8 screws to secure the base. Remove the battery tab and attach the smoke detector to the base by aligning the tabs and rotating until it clicks in place.

Smoke Detector 1 _____

Smoke Detector 2 _____

Smoke Detector 3 _____


Smoke Detector 4 _____

Smoke Detector 5 _____

Continued...

INSTALLING SMOKE DETECTORS

INSTRUCTIONS - INSTALLING A WIRELESS SMOKE DETECTOR, *continued.*

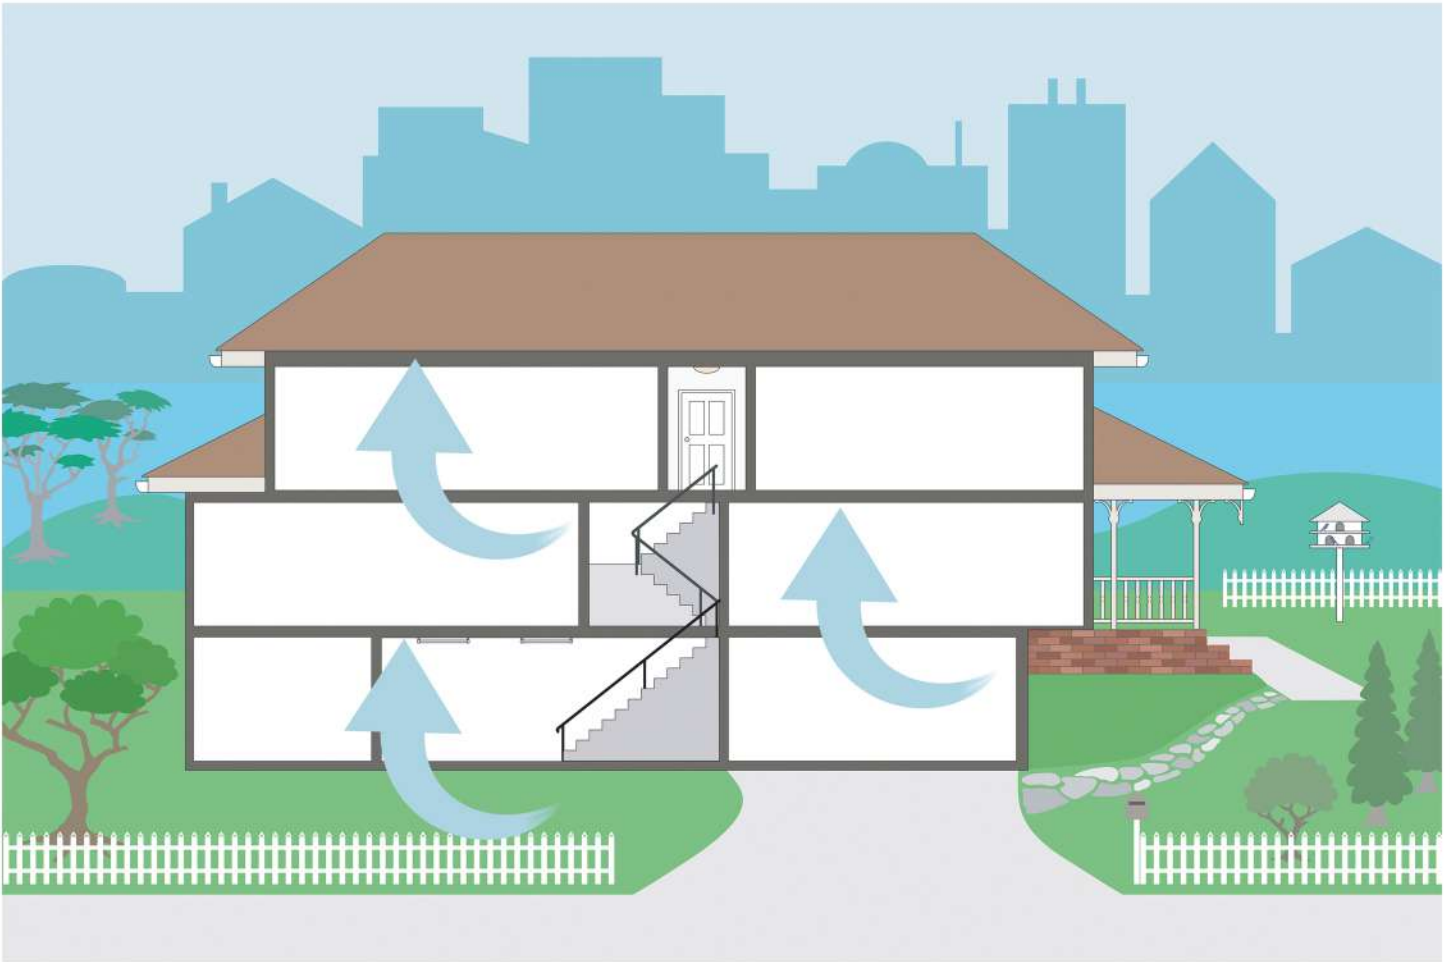

5- Place smoke detectors in each sleeping areas and on each level of the home. DO NOT install smoke detectors near stoves fireplaces or kitchens. See installation manual for detailed instructions.

Thank you for your purchase from Fox Guard Security. If you need further instruction for this specific product feel free to visit our support section of Foxguardsecurity.com or our video library on our growing You Tube channel.